


Position ID	Spare part no.	Replacement	Description
0101	00656619		Insert
0102	00707733		Water tank
0103	00613971	10009270	Display
0104	00463675	17000917	BRITA MAXTRA+ Water Filter Cartridges (2 pack)
0104	00463851	17000917	BRITA MAXTRA+ Water Filter Cartridges (2 pack)
0105	00751093		Power cord
0106	00624088	17001491	Tassimo T-Disc (orange)
0107	00624089	12027306	Switch
0108	00707708		Case-rear part
0109	00707709		Panel side
0110	00707710		Panel side
0112	00656622	10009290	Support
0113	00624119	00632077	Installation set
0114	00624091		Tray
0115	00624092		Salver
0116	00707711		Front panel
0117	00621810		Foot
0118	00707862		Case-bottom
0119	00656633		Hose
0120	00610895		Spring
0121	00744286		Instantaneous water heater
0122	00610893		Flow switch
0123	00751094		Control module
0124	00624107		Lightguide
0125	00624108		Key
0126	00659352		Valve
0127	00624109		Cable
0128	00624090		Plunger
0129	00624111	10009273	Jet
0130	00751096		Cable
0131	00622328		Sealing
0132	00624156		Water inlet
0133	00614614		Splint pin
0134	00624122		Water inlet
0135	00624125		Sealing kit
0136	00624126		Switch
0137	00751097		Cable

Position ID	Spare part no.	Replacement	Description
0199	00632077		Installation set

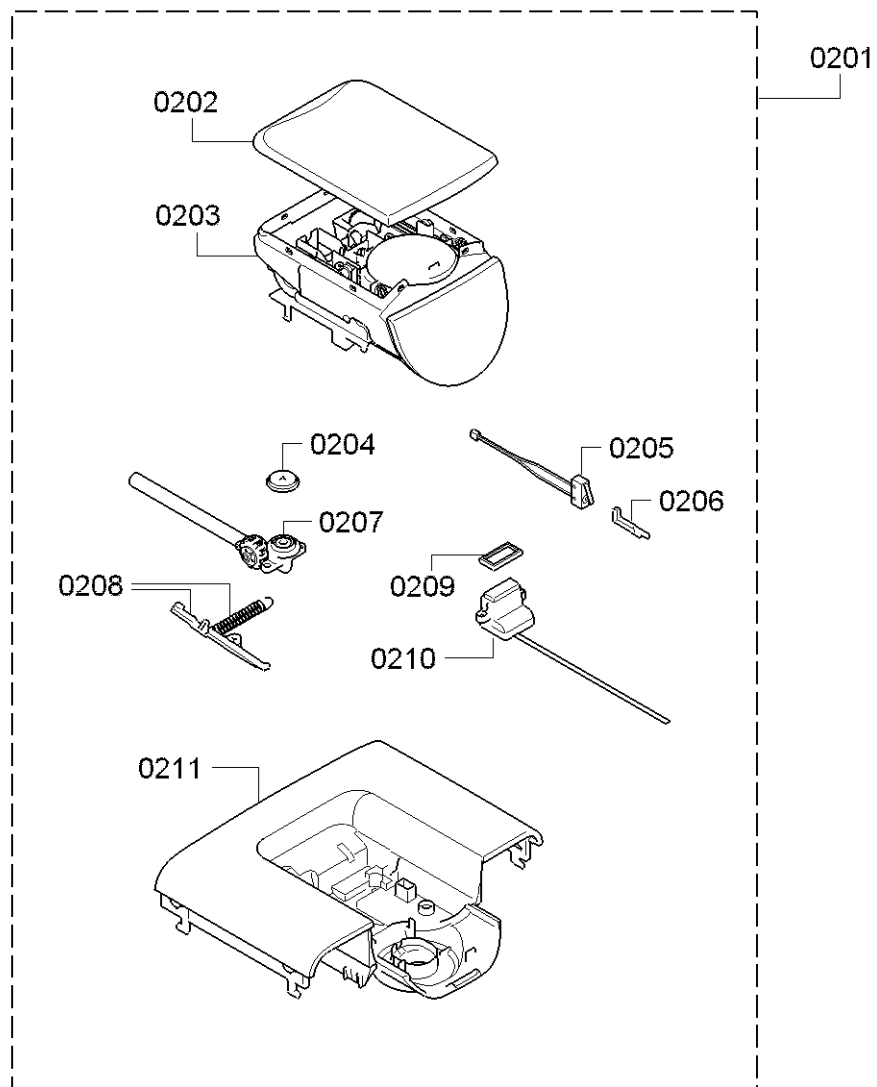

Position ID	Spare part no.	Replacement	Description
0202	00658788		Lid
0204	00626385	10009276	Membrane
0206	00626386		Tripping device
0207	00658789		Valve seat
0208	00626388		Lever
0209	00626389	10009278	Sealing
0210	00626390	10009279	Scanner
0205	00626246		Microswitch